



Making a call

To make a call:

- Dial your contact's phone number and press the green button , or,
- Press the green button  and then enter your contact's phone number.



Receiving a call

Press the green button  to answer an incoming call. To hang up, press the red button .

Setting the date and the time

When you receive your first call, the date and time will be automatically set. Or you can set it manually under Menu > Settings > Date/Time.

Adjusting the volume

- To increase the volume, press .
- To decrease the volume, press .









The Screen

THE ICONS DISPLAYED

  In standby mode or during use, your phone screen informs you of your phone's current state through icons, and in particular:

- 1 Status icons: Indicates your phone's current state

	Shows battery level or charge status		Speakerphone on
	Mute mode on		There are messages on your online message recorder
	Keypad locked		Alarm on



- 2 Information field: in the normal state, displays the name of the handset and the current time. When the 12-hour time format is set, AM or PM is displayed after the time.

Environmental impact

Electrical and electronic appliances are an integral part of our daily lives, but sooner or later they end up as waste. WEEE disposed of to landfill, incinerated or recovered without any pre-treatment has the potential to cause serious consequences for the environment and human health.

You will find a crossed out wheeled bin symbol on the base of the telephone. The symbol means that the equipment should not be disposed of with general household waste.



Play your part by:

- not disposing of this phone with your general household waste
- bringing this phone or the product it replaced to a civil amenity site at end of life for recycling or alternatively
- post or deliver your product to

eircom Recovered Engineers,
Central Warehouse,
Clondalkin Industrial Est.
Dublin 24.

There is no disposal charge for end of life equipment returned to eircom or deposited at civic amenity sites for collection by "WEEE Ireland" on behalf of eircom.

Reduce, Reuse, Recycle
eircom working for the environment.

Troubleshooting

If you're experiencing difficulties with your handset:
Check base station is plugged into the wall and that all cables are connected properly.
Check that your batteries are fully charged and inserted correctly.

If you're experiencing poor audio quality and you also have a broadband service, make sure that your handset base station is plugged directly into the main phone line. You should also install a filter on your Broadband connection.


If you require further technical assistance please contact the Helpdesk on **1850 60 20 60** From Monday to Friday (09:00 - 17:00)


For queries on eircom related services please call **1901**.

Guarantee


- a) The eircom 9000B has a warranty of 12 months and is guaranteed to be free from defects in materials and workmanship during that period.
- b) Should your eircom 9000B fail to function properly please call our Helpdesk on 1850 60 20 60.
- c) The product must have been used for the intended purpose and must not have been subjected to wilful or accidental damage.
- d) In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 12 months of purchase, eircom shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device.
- e) This warranty does not cover damage caused by excessive voltage, lightning, liquid or faults on the telephone line. If the product or serial number has been tampered with in any way, any repairs attempted or non-rechargeable batteries found to be used, the warranty shall be considered null and void.
- f) This warranty does not affect your statutory rights.


Recommendations and safety instructions

 For safety reasons, never put the handset in the base station without the battery inserted or without the lid on the battery compartment as this could cause an electric shock. To avoid damaging your handset/base, only use certified rechargeable batteries NiMH 1.2 V 650 mAh, never use no rechargeable batteries. Insert the batteries in the handset/base battery compartment respecting polarity.


 Only use the power unit supplied and connect it to the electricity mains in accordance with the installation instructions in this Quick Start Guide and the details on the sticker regarding voltage, electrical current and frequency. As a precaution if there is a risk of danger, the power plug can be pulled out to disconnect the 230 volt power supply. Therefore the sockets should be near the device and easily accessible.

 Do not install your DECT telephone in a damp environment, such as a bathroom, washroom, kitchen etc, and not within 1.50 meters of a source of water or outside. This device is designed for use in temperatures of between 5 °C and 45 °C.

 Your DECT telephone has a range of approx. 50 meters indoors and up to 300 meters outdoors. The range can be affected by the proximity of metal objects, such as a television and electrical devices.
Zones without reception may appear due to elements in the building or the use of certain construction materials. This may cause brief interruptions in conversation, due to poor transmission levels.


 Certain medical equipment and highly-sensitive machines or security systems may be affected by the transmission power of the telephone. In these cases we recommend adhering to the safety information.

 In regions greatly affected by electrical storms we recommend that you protect your telephone circuit with a special fixture for excess voltage.

 Your eircom 9000B has anti-skid pads that should leave no traces on your furniture and ensure stability. However, given the the wide variety of finishes used by furniture manufacturers, traces may appear on surfaces in contact with the parts of your 9000B. eircom decline all responsibility in any such cases of damage.

 Do not attempt to remove screws or open the appliance. It does not contain any user-replaceable parts.

 The used battery must be disposed of in line with the recycling regulations in this Quick Start Guide.

 This device is designed to be used for connecting to the public telephone network. If problems should arise, contact us on **1901**. Only use the telephone cable supplied.

If you require further assistance in using this eircom 9000B handset please contact our Helpdesk on **1850 60 20 60**.

If you have any queries relating to your service with eircom please contact us on **1901**.



Irish Trade Mark Registration no. 213824
Registered office: eircom Limited,
1HSQ, St. John's Road, Dublin 8
Registered in Ireland No. 98789

2535 16870 A

eircom 9000B cordless telephone



Quick Start Guide



Welcome to eircom

This guide introduces some of the key features of your new handset.

You can view a full user manual at <http://www.eircom.net/phoneguides>

Your eircom 9000B pack contains:

- 1 eircom 9000B handset
- 1 eircom 9000B base
- 2 rechargeable batteries
- 1 telephone connection cord
- 1 mains power supply with connection cord
- 1 belt clip
- 1 quick start guide



Getting Started

Connecting the base

 
Before making connections, please see the safety instructions at the start of the booklet.

Step 1 Turn the base over.

Step 2 Take the telephone connection cord, click it into its socket and connect the other end of the cord to the telephone socket.

Step 3 Take the mains power supply. Connect the jack plug (3) of the power supply underneath the base and connect the power supply to the mains.

Step 4 Pass the cords through the cord grips provided.

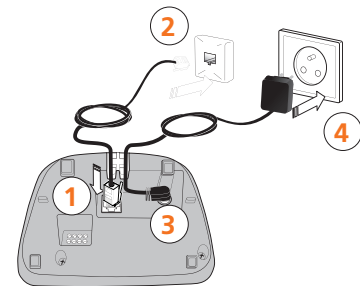

Handset set-up

Step 1 Take the batteries provided in the packaging.

Step 2 Turn over your handset and press the top of the hatch to release it.

 
Step 3 Insert the batteries one by one according to their polarities.

Step 4 Fit the hatch to the handset by pushing it up until it is completely closed.

Step 5 The screen turns on. Place your handset on its base and fully charge the batteries.

Step 6 A beep sounds when you place the handset on the base.

The battery charging icon  moves to inform you that charging is in progress. The icon display stops moving when the batteries are charged.

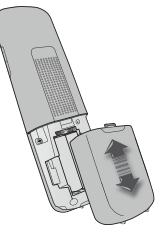

Switching the handset on / off

To switch on the handset, give a long press on the key .

To switch off the handset, give a long press on the key .

The message **Switch off HS?** is displayed.

Press the key **OK** MENU to confirm.

Charging the handset

To charge your phone, place the handset on the base, making sure that the base is connected to an power socket.

For optimal battery charge, please leave the handset in the base uninterrupted for minimum 8-12 hours. It is best to leave your eircom handset to charge overnight. During charging, batteries may heat up. This is safe and will keep the battery fully charged.

Only use certified rechargeable batteries. Non-rechargeable batteries could damage your handset.

Power save mode (environmentally friendly):

Power save mode is a default setting which extends battery charge for a longer time. If no key is pressed for 20 seconds, the backlight of the handset screen will turn off automatically to save charge. To get the display back, press any key on the handset.

 
The base

1 Handset location

2 Handset(s) Search / Pairing key

• Long press: pairing of handsets

• Short press: paging of handsets

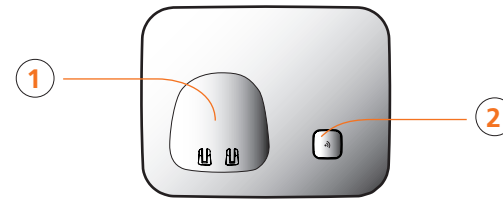

The Handset

Side key : (de)activate the amplifier

Cancel / Intercom / Delete character key

R key (flashing, to manage several calls)

Browsing through the menus / Upper and lower keys:

• To increase / Decrease the volume

• Browsing through the menus

• : See the list of calls received

• : See the list of outgoing calls

“Open line” key

• During a call: to (de)activate the hands-free mode

“Star” key

• Long press: to (de)activate the silent mode

Charging terminals

Indicator light - incoming call

Loudspeaker

Graphic screen

Upper and lower side keys :

• To Increase / Decrease the volume

• Browsing through the menus

Phonebook access key

Menu access / validation key

Mute button: cuts off the microphone

“Hang up” button

• Short press: return to main menu

• Long press: switch handset on / off

Alphanumeric keypad

“Hash” key

• Long press : (un)lock the keypad

Microphone

